


MODEL: KNOX WALL RANGE HOOD

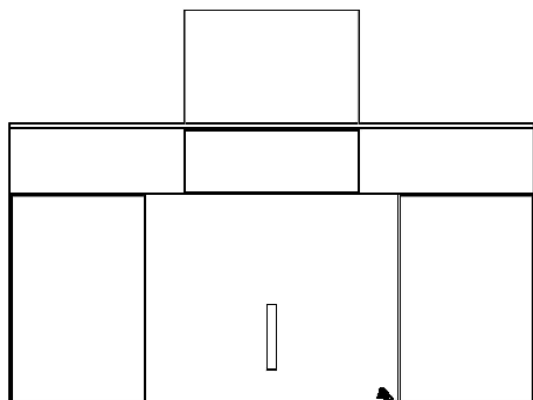


1. Fix the hanging bar to the wall



2. Place the back of the hood on the hanging bars

Control panel

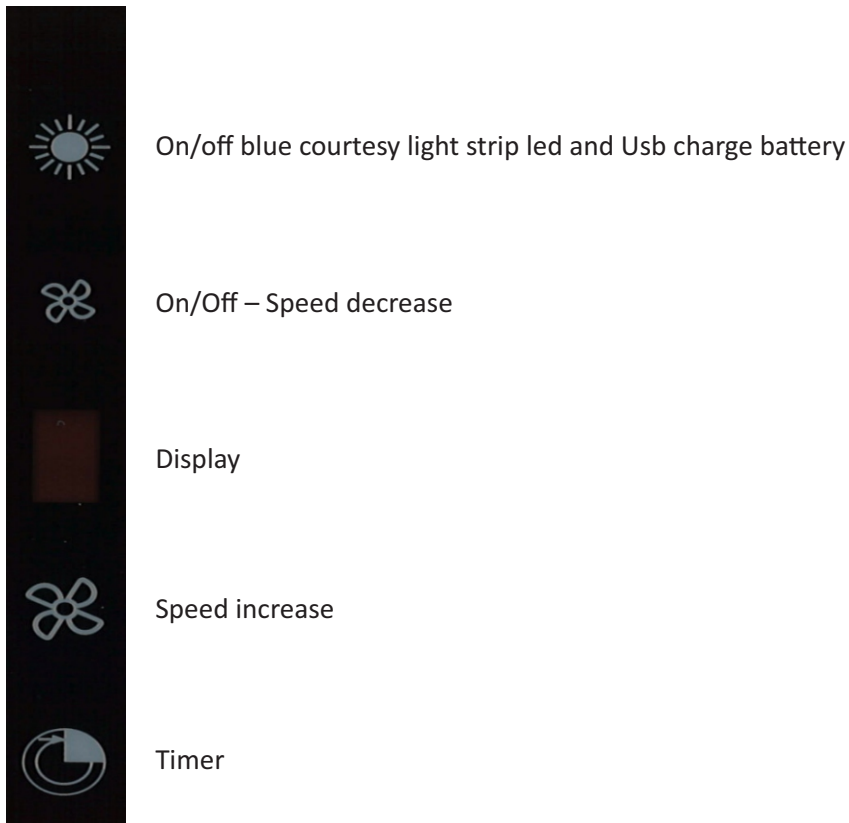

Sun: ON/OFF courtesy blue light on the bar led and Usb charge battery. To switch on touch the blue light.

Small Fan (speed decrease) :

- if the engine is off. It turns first speed
- if the engine is at speed 1, turns off the engine
- if pressed and held, it switches off the engine at all speeds

Big Fan (speed increase):

if the engine is off, it turns it on at speed 1.
If the engine is running, it increases the engine

Timer: On/off timer

NB:

1. If speed 4 is selected, the intensive function is automatically activated and the number 4 flashes. This function lasts 7 minutes, after which speed 3 is automatically selected.

2. USB: works only with the sun symbol activated. USB: the recharging function only occurs when the courtesy light is on. It's possible to recharge 2 mobile phones, 1 mobile phone and 1 tablet and only 1 tablet

Remote control

N.B TO SET UP REMOTE CONTROL WITH COOKER HOOD PRESS A BUTTON WITHIN 10 SEC FROM THE SWITCHING ON OF THE HOOD



- A. On/off speed 1
- B. Speed increase
- C. Speed decrease
- D. Light on
- E. Light off

Timer - Press A for 3 sec. Each 5 min speed decrease – the display will flash

