
Futuro Futuro RANGE HOOD INSTALLATION MANUAL MODEL: **VIALE ISLAND**

NOTE: PRIOR TO INSTALLATION Please inspect range hood visually, as well as connect it to power supply and test its operation.

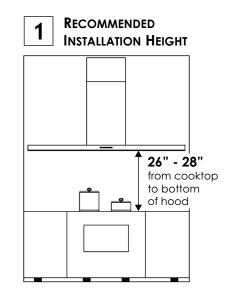





2

The filter cover panels are held **by magnets**. To open panels, pull down on the edge of the panel, in BOTH indicated spots. Avoid pulling on panel in only ONE spot, to avoid potential skewing or warping.

36" Model 2 panels, both open

48" Model 3 panels, only center panel opens

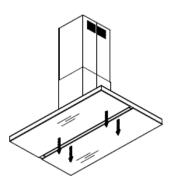

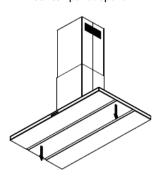



INSTALL CEILING PLATE

The range hood should be centered over the cooking area. 1.) Place the ceiling plate against the ceiling, and mark the location of screw holes. 2.) Remove ceiling plate & drill holes.

3.) Attach ceiling plate securely with screws.


NOTE: concrete / masonry ceilings: use plastic

anchors / togle bolts, as necessary.

ADJUST CHIMNEY

4

The vertical chimney is height-adjustable. 1.) Remove retaining screws. 2.) Adjust chimney to desired height. NOTE: bottom of the range hood should be 26" to 28" above cooktop, for best performance. 3.) Replace retaining screws.

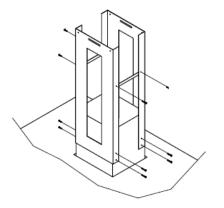



ADD CHIMNEY COVERS


Place the chimney cover/s (1 or both, depending on height) onto the chimney structure. NOTE: DO NOT REMOVE the protective plastic film, in order to avoid scratches during installation. ATTACH CHIMNEY TO CEILING (1/2) Secure the chimney into the ceiling plate.

6

9




ATTACH CHIMNEY TO CEILING (2/2) Secure the other side of the chimney into the ceiling plate.

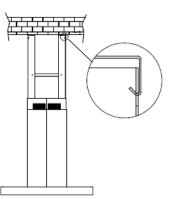




SECURE CHIMNEY TO PLATE Screw the chimney into the ceiling plate, with provided screws.

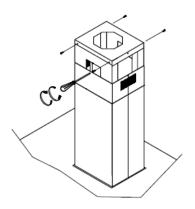

INSTALL DUCT & ELECTRIC

Connect the duct & power cable. NOTE: Duct should be 6" round, RIGID type (NOT flexible).

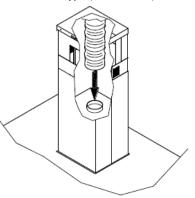



SECURE CHIMNEY COVERS

1.) Secure chimney covers with screws. 2.) Remove protective film.

