


### RUSTIC WALL RANGE HOOD

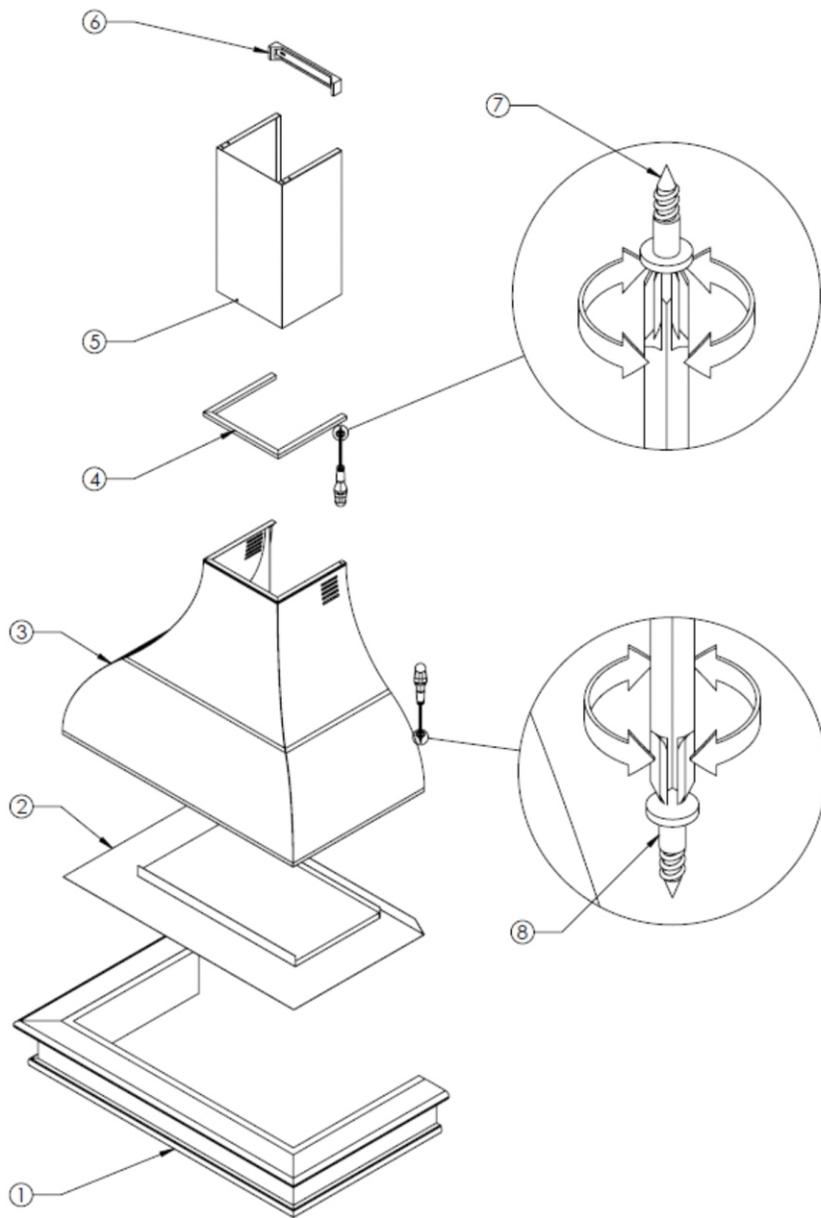


#	Description
1	Wooden frame
2	Metal panel
3	Metal body
4	Upper wooden frame
5	Chimney
6	Fixing plastic bar
7	Expansion wall plug

## Painting process

In order to paint wooden frames (1) and (4) please see the following instruction:

1. Remove the upper wooden frame (4)
2. Remove metal body (3) and metal panel (2)

## Mounting process of the painted hood

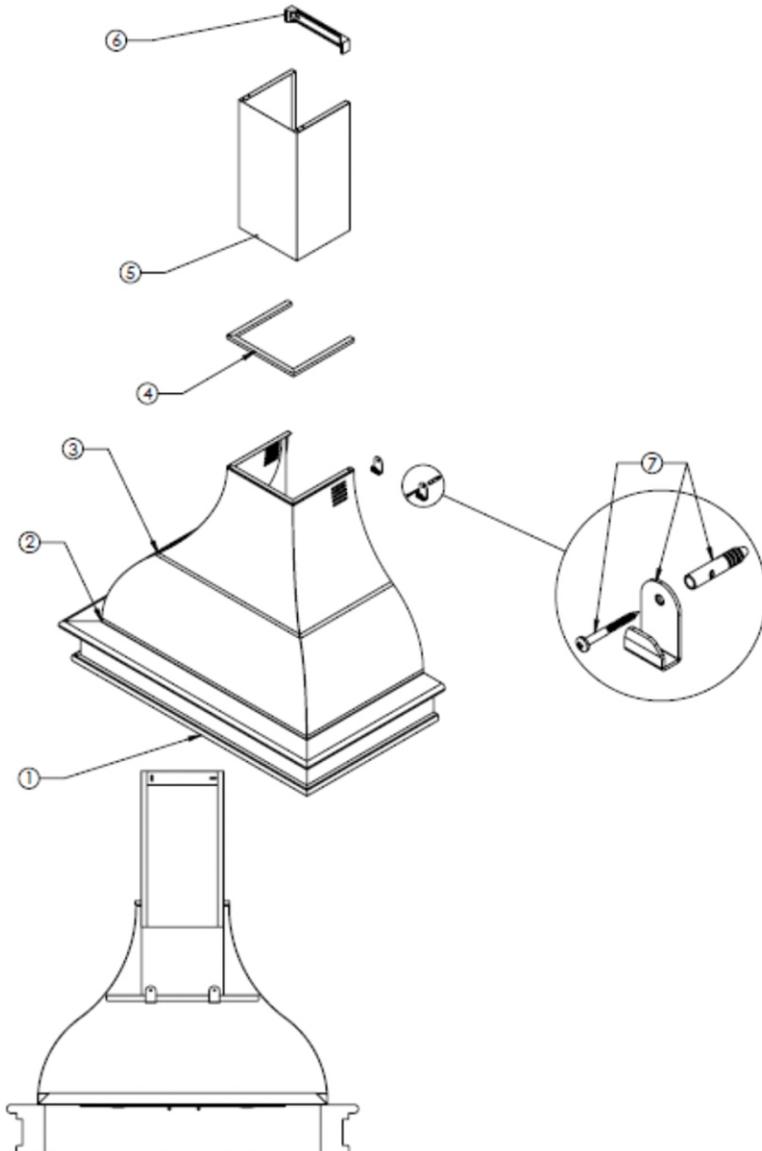


Before the installation assemble the cooker hood use the following instruction:


1. Place the metal panel (2) on the wooden frame (1) and then the metal body (1)
2. Screw all together
3. Fix by screwing the upper wooden frame (4) to metal body (3)
4. In order to place the blower inside metal panel (2) see the instruction provided with the blower.

## Installation

1. Drill the wall to place the expansion wall plug (7) measuring the distance of the holes in the back of the metal body (3)

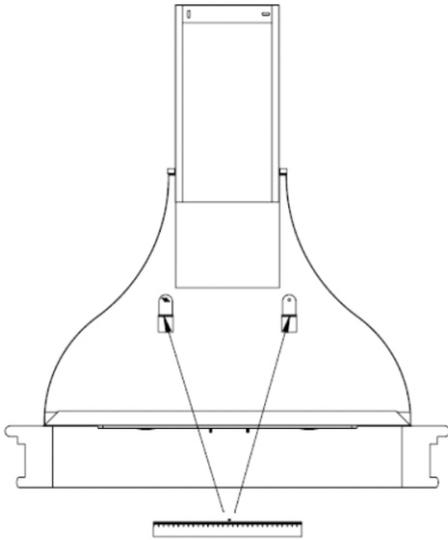

2. Place the chimney (5) fixing the plastic bar (6) to the wall
  - 2.a In case the plastic bar (6) is not present fix the chimney directly to the metal body (3) joining them by using the provided screws

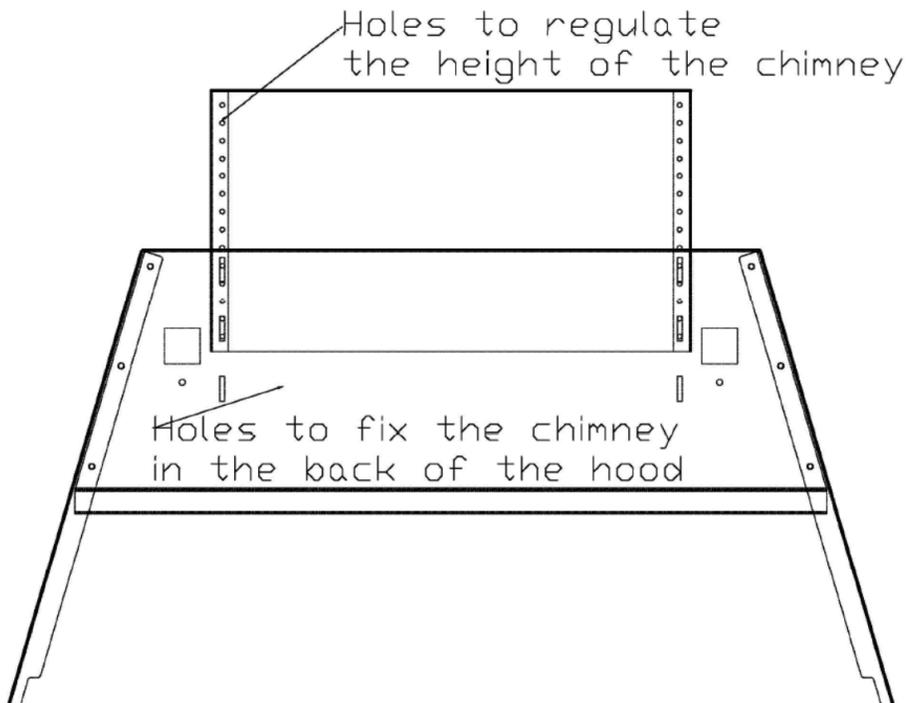

3. Place the mounted hood in the hooks previously mounted to the wall with the expansion wall plug